



MANUAL - WINE CABINETS

V50DG "2E"



Instruction Manual for V50DG “2e”

Safety Instructions

Attention

Do Not Use An Extension Cord

Use an exclusive wall outlet. Do not connect your wine cooler to extension cords or together with any other appliance in the same wall outlet. Do not splice the cord.

Important Warning

An empty refrigerator is a very dangerous attraction to children. Remove either the gasket, latches, lids or doors from unused appliances, or take some other action that will guarantee it harmless.

Danger: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors
- Leave the shelves in place so that children may not easily climb inside.

Don't wait - Do it now!

Safety Instructions

Grounding Instructions

This wine cooler must be grounded in the event of an electrical short circuit. Grounding reduces the risk of electrical shock. This wine cooler is equipped with a power cord having a grounding wire with a grounding plug. The wine cooler plug must be plugged into a properly installed and grounded electrical outlet.

Warning Improper Use of the Grounding Plug can result in the risk of electric shock.

Consult a qualified electrician or service person if the grounding instructions are not completely understood.

Caution: Read and follow all safety rules and operating instructions before using this product.

Installation Instructions

 
Remove the exterior and interior packaging. Use a soft dry cloth to thoroughly wipe the outside of the wine cooler. Use a wet, lukewarm cloth to wipe the inside of the wine cooler.

Air must circulate freely in front of the wine cooler. Avoid placing the wine cooler near any heat source, direct sunlight or moisture. Direct sunlight may affect the finish of the wine cooler. Nearby heat sources will cause higher electricity consumption.

Installation of Shelves

Wooden shelves

To fit or remove the shelf, tilt the shelf as per the diagram and simply pull out, or push in the shelf until it sits on the support brackets securely.

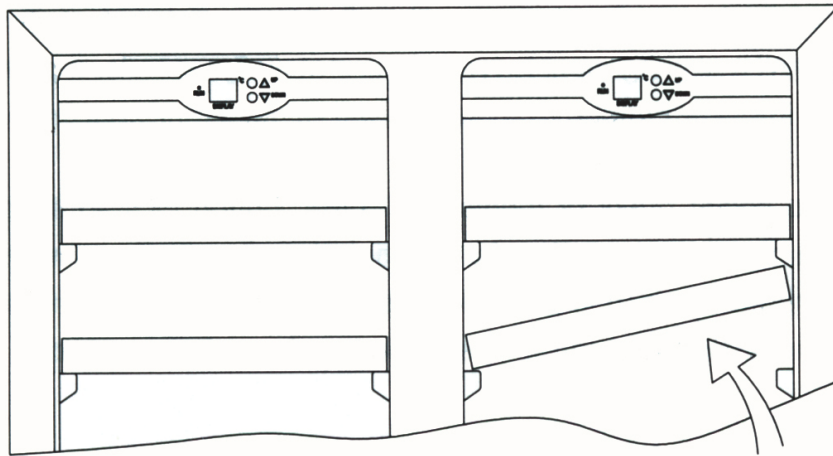


Attention:

- Store wine in sealed bottles.
- Do not overload the cabinet.
- Do not open the door unless necessary
- Do not cover shelves with aluminium foil or any other shelf material which may prevent air circulation.
- Should the wine cooler be stored without use for long periods it is suggested, after a careful cleaning, to leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible formations of condensation, mold or odors.

Operation:

Before starting the wine cooler, ensure that the cabinet is leveled.

 Note: The power (RUN) indicator light is located on the LED control panel inside the unit and illuminates when the compressor (cooling) cycle is operational, turns off when the compressor (cooling) cycle is finished.

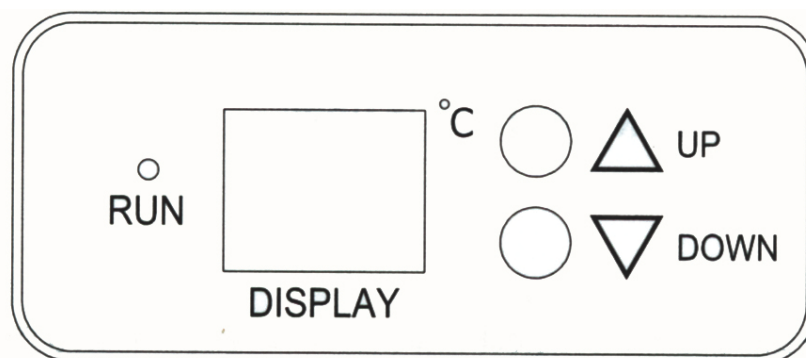

Setting The Temperature Controls:

Each cooling compartment of the wine cooler (upper and lower) is independently controlled. To set the temperature:

1. Connect the power cord to a properly grounded outlet. In the event of a power interruption, all previous temperature settings are automatically erased and each compartment will default to a preset temperature setting of
7° C (45° F) Left compartment
12° C (54° F) Right compartment
2. Set the desired cooling temperature by pressing the buttons adjacent to the UP/DOWN program. Each depression of the buttons will scroll through the available temperature settings (for each compartment) in increments of 1 degree. The temperature selected will flash in the LED display for approximately 5 seconds, then revert back to display the temperature of the internal cabinet.

Both compartments: The temperature setting can be adjusted from 4° C - 18°C
(39°F - 64°F)

3. To view the "set" temperature (anytime) press and hold the corresponding button for approximately 5 seconds, the "set" temperature will temporarily "flash" in the LED display for 5 seconds
Flashing LED = Set Temperature
Steady LED = Cabinet Temperature
4. This unit has the option to display temperatures in either Celsius or Fahrenheit. To change the setting press and hold both buttons (UP/DOWN) simultaneously for approximately 5 seconds, a prompt (beep) will sound and the blue pilot light adjacent to the C or F mode illuminates.

Note: To switch off the wine cooler press or toggle "ON / OFF" button located at the bottom. Please refer to the following diagram for location of the "ON / OFF" switch. When the wine cooler is not in use (operation) for a long period of time, leave the door partially open to prevent mold/mildew from forming inside the cabinet. **Note: Always wait 3 to 5 minutes before restarting the unit if operation has been interrupted.**

Defrosting / Condensation

Your wine cooler is designed with an "Auto-Cycle" defrost system. During the "Off Cycle" the refrigerated surfaces of the wine cooler (interior rear wall) defrost automatically. The defrost water is channeled into a condensate drain pan which is located at the back of the wine cooler next to the compressor from where it evaporates.

Care and Maintenance

Upon receiving your wine cooler, leave the door open for 24 hours. When cleaning the inside of the wine cooler you can use a solution of a tablespoon of baking soda to one (1) quart of water, or a mild soap suds solution, or some mild detergent. Shelving does not require cleaning. To clean the exterior cabinet of your wine cooler, use a soft damp cloth with mild detergent or appliance cleaner.

Storing your wine Cooler

If you intend not to use the wine cooler for short periods of time, leave the control panel at its usual settings.

During longer periods of absences:

1. Remove bottles from wine cooler.
2. Unplug wine cooler from the electrical outlet.
3. Thoroughly clean the inside and outside of the wine cooler.
4. Leave the door open to avoid possible formations of condensation, mold or odors.

What to do regarding power failure

Most power failures are corrected with a short period time. An hour or two loss of power will not affect your wine cooler temperatures. To protect your wines while the power is off, you should minimise the number of door openings. For power failures of longer durations, take steps to protect your wine.

If you have to move your wine cooler

Remove all bottles from the wine cooler and securely fasten down all loose items inside the wine cooler. To avoid damaging the leveling legs, turn them all the way into the base of the unit.

Humidity Maintenance System

The wine cooler is equipped with a system for maintaining the correct level of humidity. If humidity is too low, snap the small plastic reservoir on to the tope rack of the wine cooler. Fill this reservoir 3/4 full with water.

Check water level occasionally to refill.

How to Replace LED light

- Step 1: Remove the electrical box from cabinet (note cut off the power firstly when removing LED light)
- Step 2: Remove the LED light from control board (Fig.1)
- Step 3: Accord to (Fig. 2, 3, 4) press the four buckle of the LED light bracket to the sides, then take out the LED light.
- Step 4: When removing the LED light, remember to remove all three pieces LED light at one time.

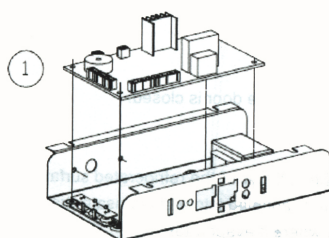 


Fig. 1

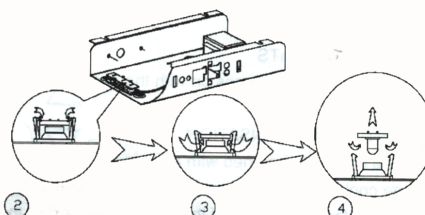 


Fig.2

Fig.3

Fig.4